

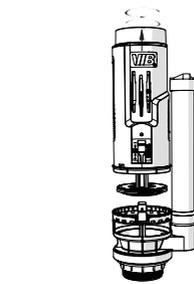
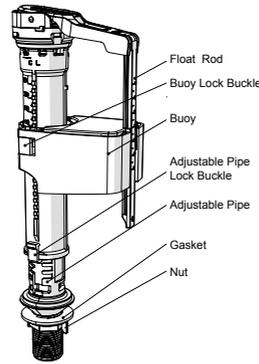
 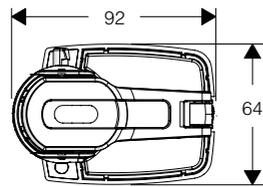


J108 Fill Valve of Installation Information


Structure Chart Unit :mm

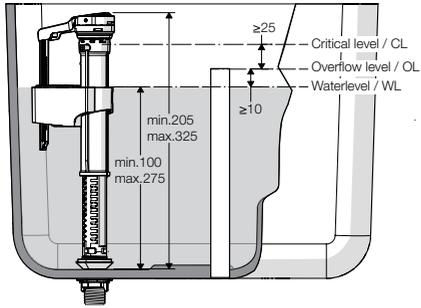


1. Take the body out from base.



2. Remove the hex nut and nut collar from flush valve base. Don't remove the seal !!!

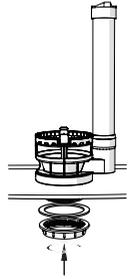


3. Insert the flush valve's base with rubber into the water tank, then screw on the plastic nut collar and hex nut properly.

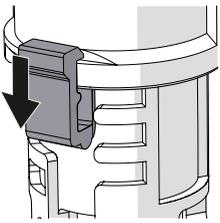


1. Loose lock buckle down.




2. Rotate to loosen the adjustable pipe.

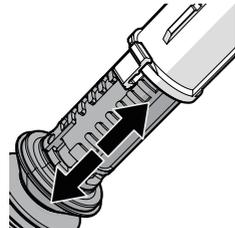


3. Pull adjustable pipe up and down until adjust the suitable height.

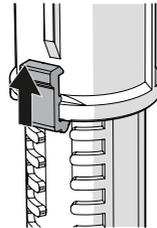


4. Push up into the buckle to the locked position.

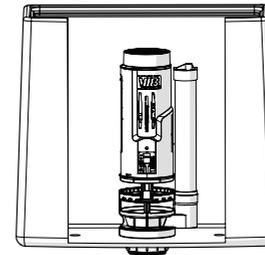


4. Take the body of the flush valve and install inside of tank. Put forth effort and push the body until two side of buckle lock the base.

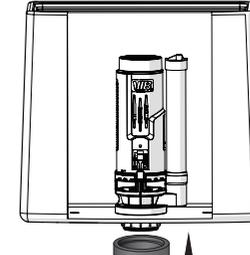


5. Install the rubber gasket at the bottom of the tank base.

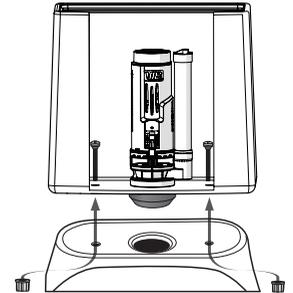


6. Take the water tank and install it on the two piece toilet of mounting holes, then fasten the bolts.

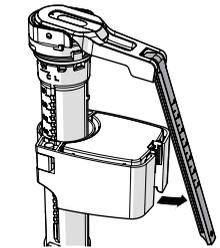


5. Pull outward the float rod.

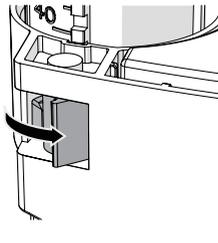


6. Rotate the buoy of lock buckle.

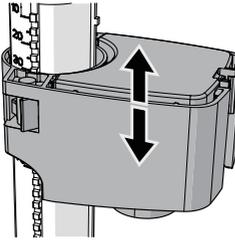


7. Pull the buoy up and down until adjust the suitable height.

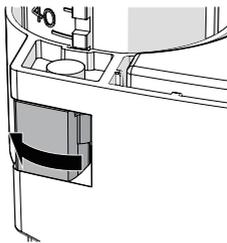


8. Turn the lock buckle to the locked position.

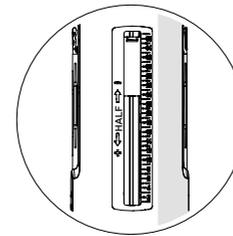


a. HALF LOGO stand for half flushing window, it can adjust the half flushing of water level more or less.

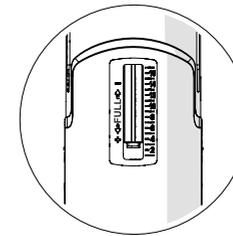


b. FULL LOGO stand for full flushing window, it can adjust the full flushing of water level more or less.

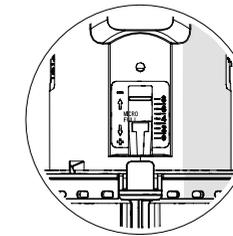


c. Micro FULL LOGO stand for the full flushing of fine-tuned window, it can adjust the full flushing of accurate water level when the full flushing of buoy at a minimum.

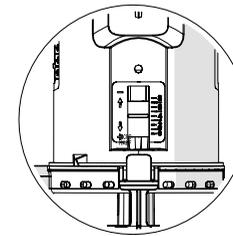


d. Micro HALF LOGO stand for the half flushing of fine-tuned window, it can adjust the half flushing of accurate water level when the half flushing of buoy at a minimum.

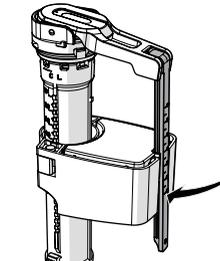


9. Inward to lock the float lever to lock.

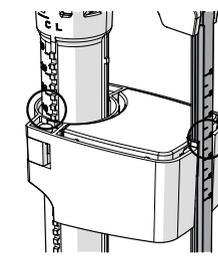

10. ATTENTION: After adjusting the body's scale value, please keep it the same as the scale value on the float rod.

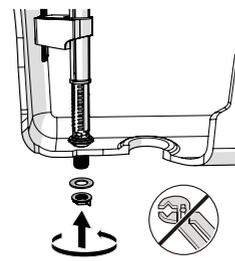

11. Install the fill valve into tank, rotate the gasket and nut.

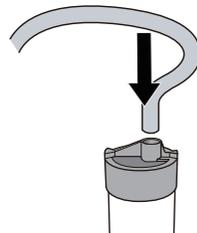

12. Insert the filling water hose of 10mm length into the overflow pipe inside.

\* ATTENTION:

- 1.The pressure range 0.02-1MPa!
- 2.Please pay attention to long-term working temperature of the fill valve shall not exceed 30 degree centigrade, the water temperature of the short-term work shall not exceed 40 degree centigrade. Make sure the water supply pipe does not occur in the icy phenomenon.
- 3.Please use the correct connection mode.
- 4.Water tank of the impurities must be removed before installation.

版本：01

料号：A00333

名称：J108+P206F 英文说明书

规格：285\*210mm

材质：60g双胶纸

印刷要求：黑白印刷 内容为正面印刷

日期：2016/11/29

检验标准要求：

1. 应与设计图稿一致（材质、颜色、内容等）；
2. 印刷图案、字迹及图形须清晰正确，端正，位置准确，无明显脱落，不得
3. 外表面平整，不得有凹凸不平、割伤、破损、褶皱、异常污点、污物、脱层、毛边、
4. 颜色与设计原稿相比较，相同的颜色均匀一致，与标准板比较在色差范围内，印刷字符、图案、图形及色块的边缘不清晰度不大于0.1m；
5. 切边应整齐，装订应牢固。