



Installation instruction for: (J13011CK0+P23007LK2)
A Dual Flush Toilet Mechanism and Fill Valve with Drain


A. Installation Instruction Fill Valve Mechanism

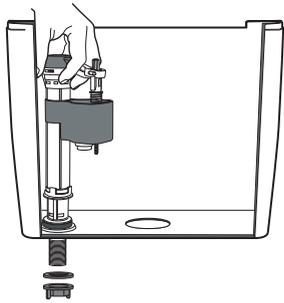


1. Insert the new fill valve with silicon seal at the base in the inlet hole of water tank and screw on the nut with collar tightly.

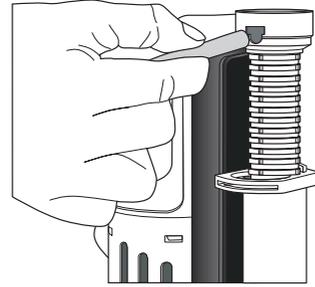

2. Connect the refill tube with refill restrictor from fill valve to the overflow pipe of the flush valve.

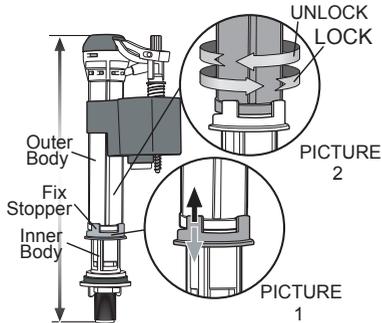


3. At the base of the fill valve's outer body, unlock the fix stopper (see picture 1) by pushing it down, then twist the outer body (see picture 2) clockwise to unlock. Adjust the outer body to the desired height. After setting it, twist the outer body counter clockwise to lock it to that position then pull the fix stopper upward to secure it.

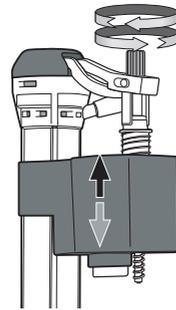


4. Fine and final adjustment can be made by rotating the screw rod clockwise or counter-clockwise on the fill valve cup. In order to achieve desired water level.


B. Installation Instruction Dual Flush Valve Mechanism

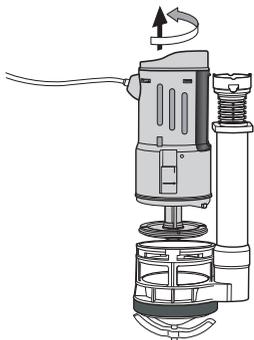


1. Hold the base of the flush valve and rotate the body counter-clockwise. Take it out from base.

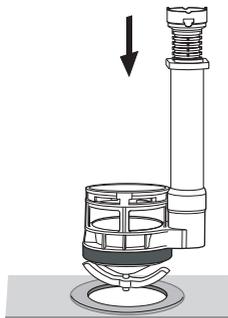


2. Put the base into the ceramic hole.

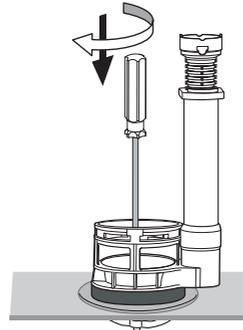


3. Use screwdriver to screw up the nut tightly.

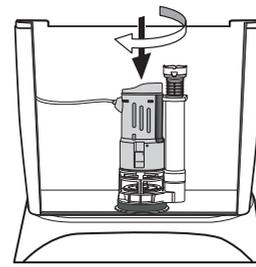


4. Take the body of flush valve and set it into the base and lock in place by rotating it clockwise.

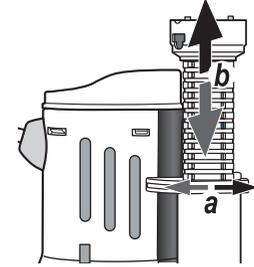

5. To adjust the height of the overflow pipe, slide the lock (a), then set the desired height of the overflow pipe (b). Put the lock back after.

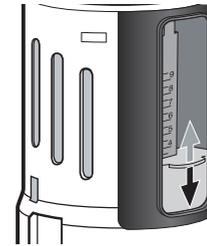


6. Adjust the half flush volume by sliding the marked part up or down. When the buoy is higher, the discharge water volume is less. Slide down the part can buoy little until you are flushing enough water.

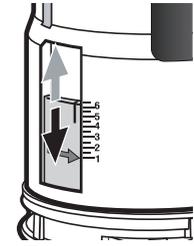


7. Adjust the full flush volume by sliding the red part up or down. When the buoy is higher, the discharge water volume is less. Slide down the part can buoy little until you are flushing enough water.

C. Button installation for side ceramic hole

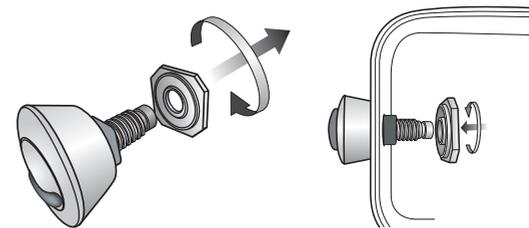


1. Unscrew the flanged nut.

2. Insert the button into the oval hole of tank and then screw up the flanged nut in sequence.

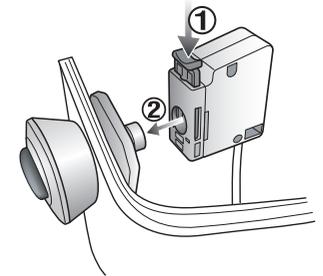


3. Push in switch box's green button (1) to connect with button body.

D. Button installation for top ceramic hole

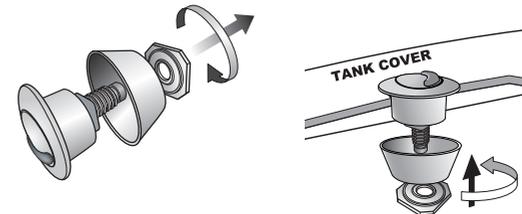

1. Unscrew the flanged nut and cover.


2. Insert the button into the oval hole of tank and then screw up cover and flanged nut in sequence.

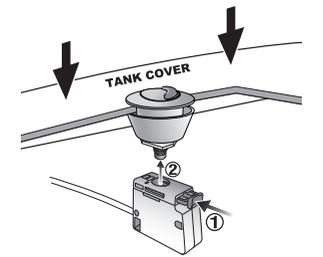


3. Push in switch box's green button (1) to connect with button body.

Installation instruction for: (J13011CK0+P23007LK2)
A Dual Flush Toilet Mechanism and Fill Valve with Drain


A. Installation Instruction Fill Valve Mechanism

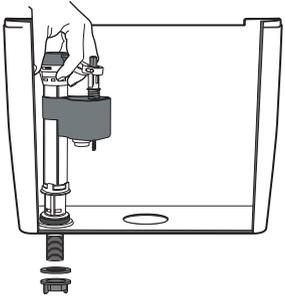


1. Insert the new fill valve with silicon seal at the base in the inlet hole of water tank and screw on the nut with collar tightly.

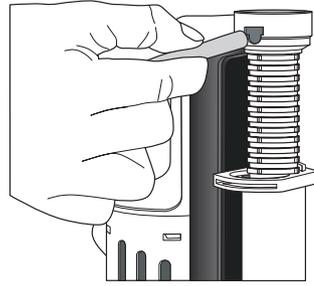


2. Connect the refill tube with refill restrictor from fill valve to the overflow pipe of the flush valve.

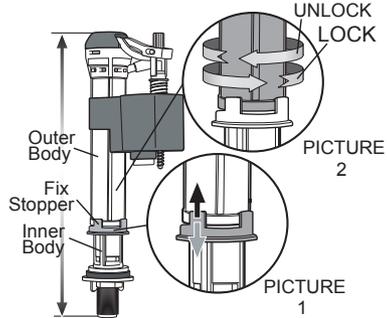


3. At the base of the fill valve's outer body, unlock the fix stopper (see picture 1) by pushing it down, then twist the outer body (see picture 2) clockwise to unlock. Adjust the outer body to the desired height. After setting it, twist the outer body counter clockwise to lock it to that position then pull the fix stopper upward to secure it.

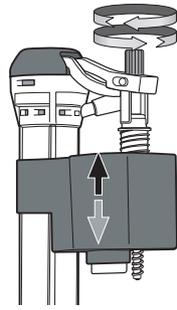


4. Fine and final adjustment can be made by rotating the screw rod clockwise or counter-clockwise on the fill valve cup. In order to achieve desired water level.

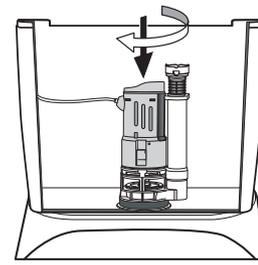


4. Take the body of flush valve and set it into the base and lock in place by rotating it clockwise.

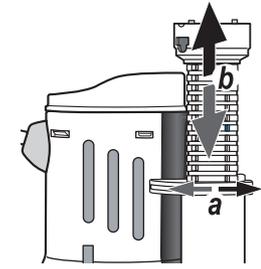

5. To adjust the height of the overflow pipe, slide the lock (a), then set the desired height of the overflow pipe (b). Put the lock back after.

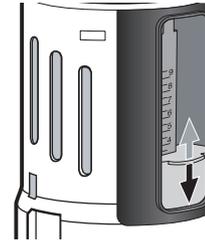


6. Adjust the half flush volume by sliding the marked part up or down. When the buoy is higher, the discharge water volume is less. Slide down the part can buoy little until you are flushing enough water.

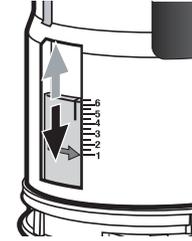


7. Adjust the full flush volume by sliding the red part up or down. When the buoy is higher, the discharge water volume is less. Slide down the part can buoy little until you are flushing enough water.

C. Button installation for side ceramic hole

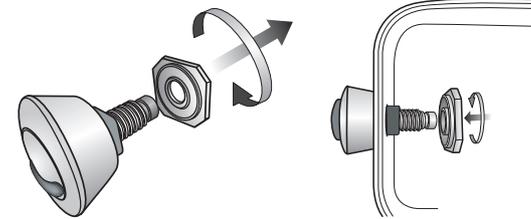


1. Unscrew the flanged nut.

2. Insert the button into the oval hole of tank and then screw up the flanged nut in sequence.

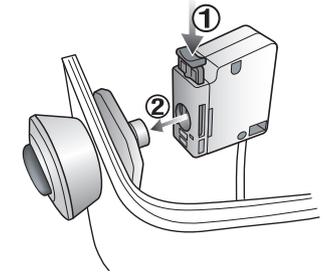


3. Push in switch box's green button (1) to connect with button body.


B. Installation Instruction Dual Flush Valve Mechanism

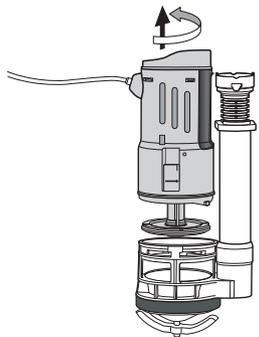

1. Hold the base of the flush valve and rotate the body counterclockwise. Take it out from base.

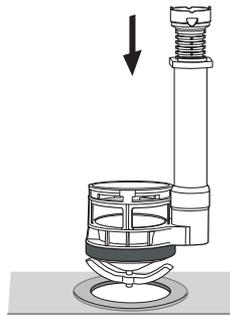


2. Put the base into the ceramic hole.

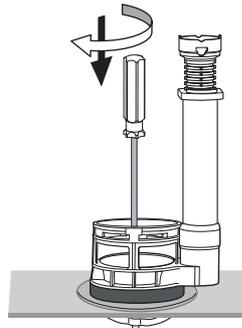


3. Use screwdriver to screw up the nut tightly.


D. Button installation for top ceramic hole

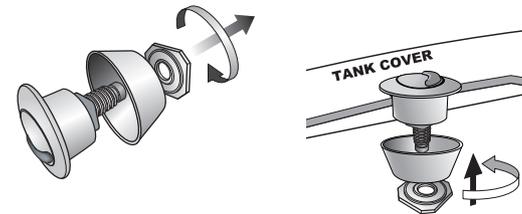

1. Unscrew the flanged nut and cover.

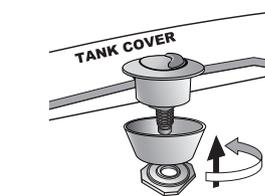

2. Insert the button into the oval hole of tank and then screw up cover and flanged nut in sequence.

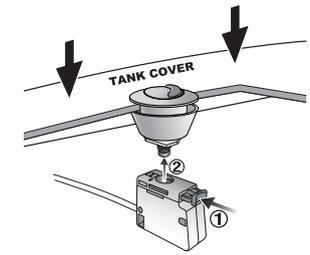

3. Push in switch box's green button (1) to connect with button body.