



**Installation instruction for: (J13011CK0+P23007FK1)**  
**A Dual Flush Toilet Mechanism and Fill Valve with Drain**


**A. Installation Instruction Fill Valve Mechanism**

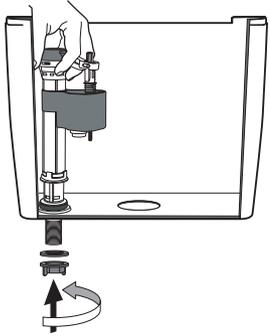


1. Insert the new fill valve with silicon seal at the base into the inlet hole of water tank and screw on the nut with collar tightly.

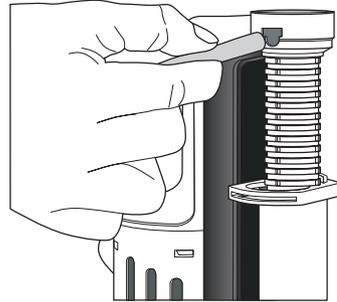

2. Connect the toilet bowl refilling tube from fill valve to the overflow pipe of flush valve.

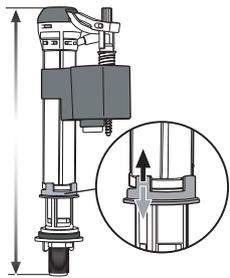


3. At the base of the fill valve's outer body unlock the fix stopper (see picture) by turning it counterclockwise then free up the inner body by pulling and or pushing on it.

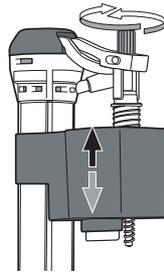


4. Fine and final adjustment can be made by rotating the screw rod clockwise or counterclockwise in the fill valve cup.


**B. Installation Instruction Dual Flush Valve Mechanism**

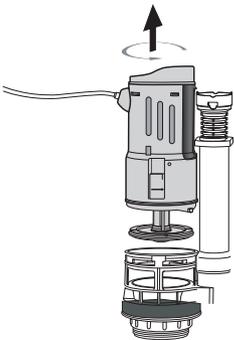

 
1. Hold the base of the flush valve and rotate the body counterclockwise take it out from base.




2. Remove the hex nut and nut collar from flush valve base. Don't remove the seal !!!

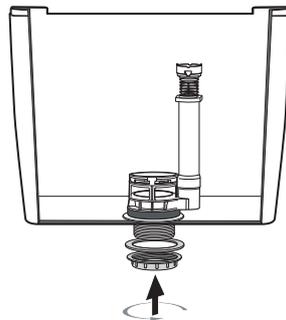


3. Insert the flush valve's base into the water tank. Screw on the nut collar and hex nut properly.

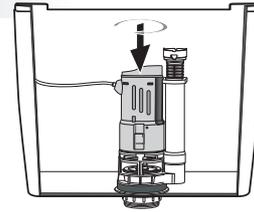


4. Take the body of flush valve and set it into the base and lock in place by rotating it clockwise.

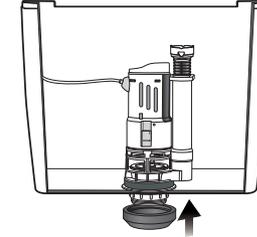

5. Insert the tank to bowl rubber gasket on to the flush valve's outlet bottom.

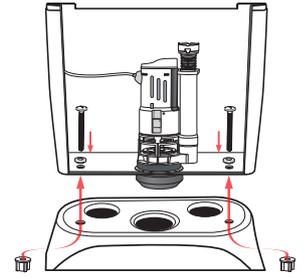


6. Fasten the tank to bowl with one pair of plastic or stainless steel bolts. Make sure bolts have the black rubber washer under the bolt's head.

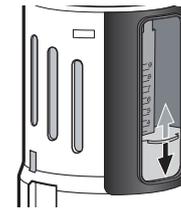

7. Adjust the half flush volume by sliding the marked part up or down. when the buoy is higher. the discharge water volume is less. slide down the part can buoy little until you are flushing enough water.




8. Adjust the full flush volume by sliding the red part up or down. when the buoy is higher. the discharge water volume is less. slide down the part can buoy little until you are flushing enough water.

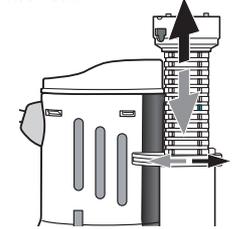


9. Overflow pipe adjustable height.


**C. Flush handle installation**

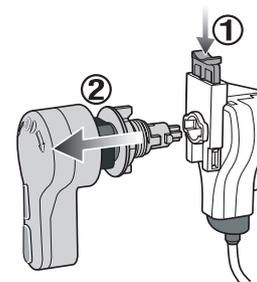


1. Push in the blue button which is on the flush handle switch box and then pull handle out.

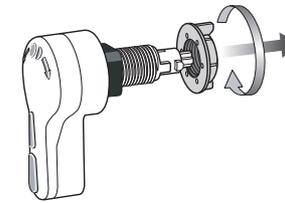


2. Unscrew the flanged nut from the handle body and remove the square seal.

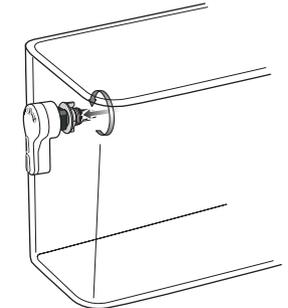


3. Insert the seal into the square hole on the water tank (fits only one way)

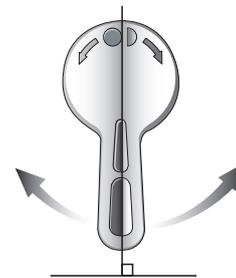

4. Make sure the handle in vertical position, it swings left and right approx. 90degrees

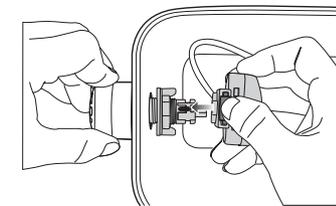

5. **Important!!!** Align the grooves on the handle mechanism in vertical position (see picture).

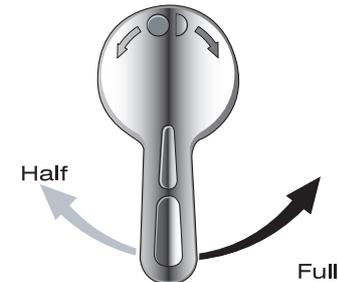

6. The left is half flush. the right is full flush.

Full